



IMPORTANT SAFETY WARNINGS



THE INSTALLATION MUST ONLY BE PERFORMED BY A LICENSED ELECTRICIAN. TO PREVENT DEATH, INJURY OR DAMAGE TO PROPERTY, THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE TO NATIONAL ELECTRIC CODE (NFPA70) IN THE US OR CANADIAN ELECTRICAL CODE (CSA22.1) IN CANADA.

L'INSTALLATION NE DOIT ÊTRE EFFECTUÉE QUE PAR UN ÉLECTRICIEN AGRÉÉ. POUR PRÉVENIR LES DÉCÈS, LES BLESSURES OU LES DOMMAGES MATÉRIELS, CE PRODUIT DOIT ÊTRE INSTALLÉ CONFORMÉMENT AU CODE NATIONAL DE L'ÉLECTRICITÉ (NFPA70) AUX USA OU CODE CANADIEN DE L'ÉLECTRICITÉ (CSA22.1) AU CANADA.


CONSULT A QUALIFIED ELECTRICIAN TO ENSURE CORRECT BRANCH CIRCUIT CONDUCTOR.

CONSULTER UN ÉLECTRICIEN QUALIFIÉ POUR VOUS ASSURER QUE LES CONDUCTEURS DE LA DÉRIVATION SONT ADÉQUATS.

CAUTION – RISK OF FIRE. MIN 75°C (167°F) SUPPLY CONDUCTORS.

ATTENTION – RISQUE D'INCENDIE. LES FILS D'ALIMENTATION 75°C (167°F) MIN.


- To reduce the risk of death, personal injury or property damage from fire, electric shock, falling parts, cuts/abrasions, and other hazards please read all warnings and instructions included with the fixture box and labels.
- Follow all manufacturer's warnings and restrictions for: driver type, burning position, mounting locations/methods, replacement and recycling.
- Wear gloves and safety glasses at all times when removing luminaire from carton, installing, servicing or performing maintenance.
- Disconnect or turn off power before installation or servicing the luminaire.
- Allow fixture to cool before handling.
- Do not exceed maximum wattage marked on the label.
- Do not operate in close proximity to persons, combustible materials or substances affected by heat or drying.
- Verify that supply voltage is correct by comparing it with label information.
- Wiring connections should be capped with UL-approved wire connectors.
- DO NOT INSTALL DAMAGED PRODUCT! This luminaire has been properly packed so that no parts should have been damaged during transit. Inspect to confirm. Any part damaged during or after assembly should be replaced.
- Maintenance should be performed by person(s) familiar with the luminaires' construction and operation and any hazards involved. Regular fixture maintenance programs are recommended.
- It will occasionally be necessary to clean the outside of the refractor/lens. Frequency of cleaning will depend on ambient dirt level and minimum light output which is acceptable to user. Refractor/lens should be washed in a solution of warm water and any mild, non-abrasive household detergent, rinsed with clean water and wiped dry.
- Should optical assembly become dirty on the inside, wipe lens and clean in above manner, replacing damaged gaskets as necessary.
- These instructions do not purport to cover all details or variations in equipment nor to provide every possible contingency to meet in connection with installation, operation, or maintenance.

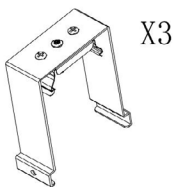


Recessed Holding Bracket



Tapping Screw



Screws for recessed holding bracket

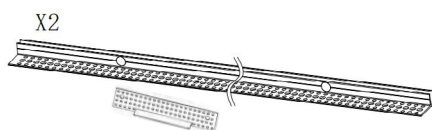

Recessed Trimless Aluminum Flange




Screw

Specifications and dimensions subject to change without notice.


TRIMLESS RECESSED MOUNT INSTALLATION

①

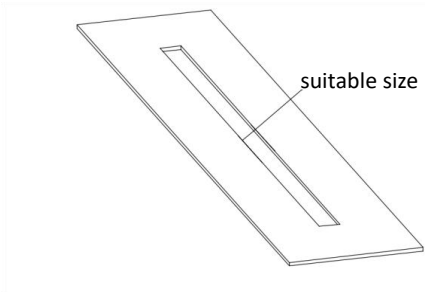


1. Cut a slot in the ceiling to accommodate the size of the linear fixture.

②

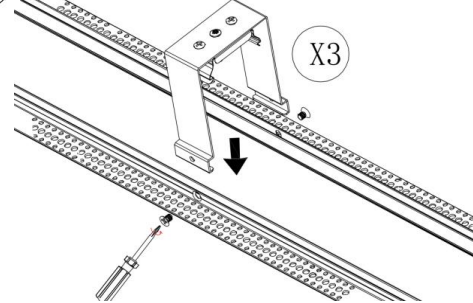


2. Screw the Recessed Holding Bracket to the Recessed Trimless Aluminum Flange.

③

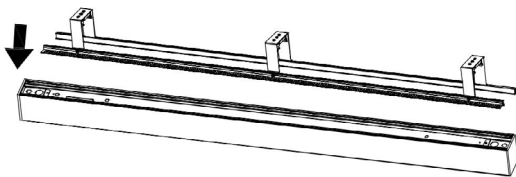


3. Bring the Trimless recessed bracket over fixture and press down on end brackets to mount spring clips onto the linear fixture. Screw assembly by screwing down bolts on recessed trim brackets.

④

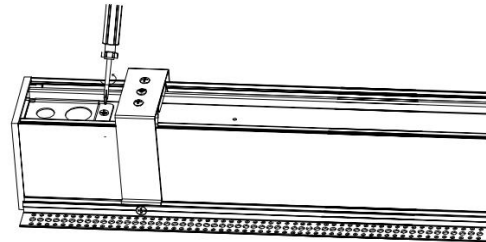


4. Use a screwdriver to remove the knockout plate from the fixture.

⑤

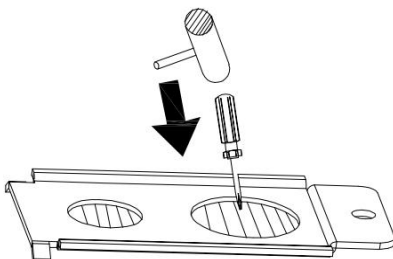

5. Use mallet and a flat-head screwdriver to punch one of the knock-out from knockout plate.


⑥

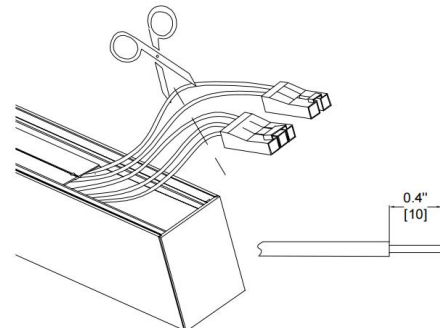

6. Cut off the terminals of the cable, and peel off the wires about 0.4inch length.


TRIMLESS RECESSED MOUNT INSTALLATION

⑦

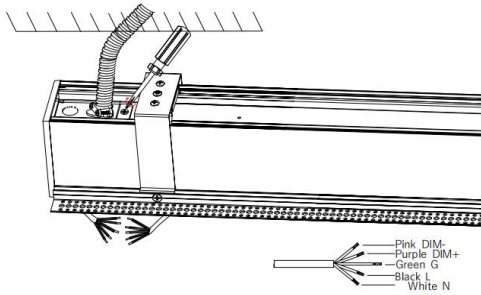


7. Connect supply wires to 5 wire cables matching color of the wires and fixed on the knockout plate.

⑧

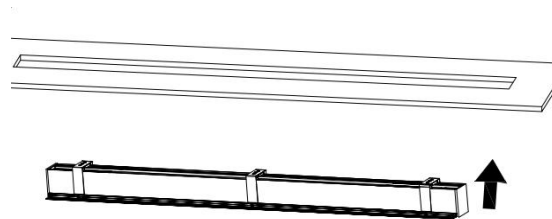


8. Insert fixture with recessed trim kit into pre-cut slot.

⑨

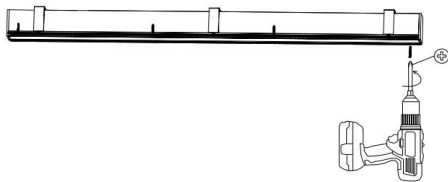


9. Secure the flange to the ceiling with screws.

⑩

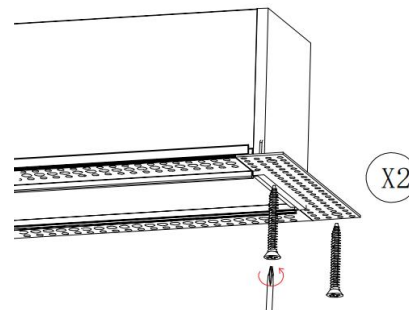


10. Use screws to fix the extension side cover on both sides of the linear fixture.

⑪

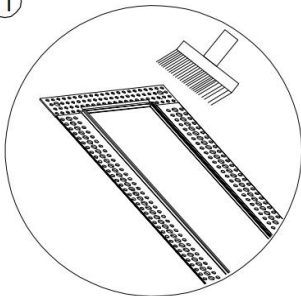

11. Cover lens with masking tape, apply hot mud or joint compound over flange, feather out to level, and let it dry.


⑫

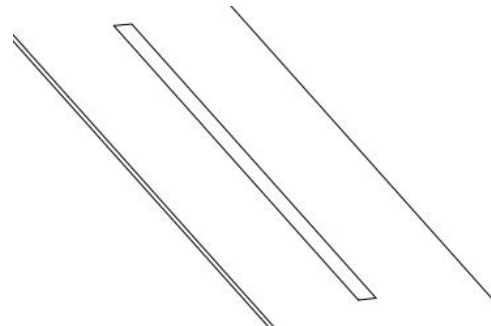

12. Then sand to a smooth surface, paint and let it dry, remove masking tape from lens.

TRIMLESS RECESSED MOUNT INSTALLATION

⑬

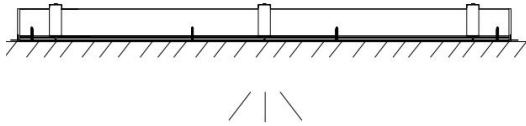

12. The installation is complete.